



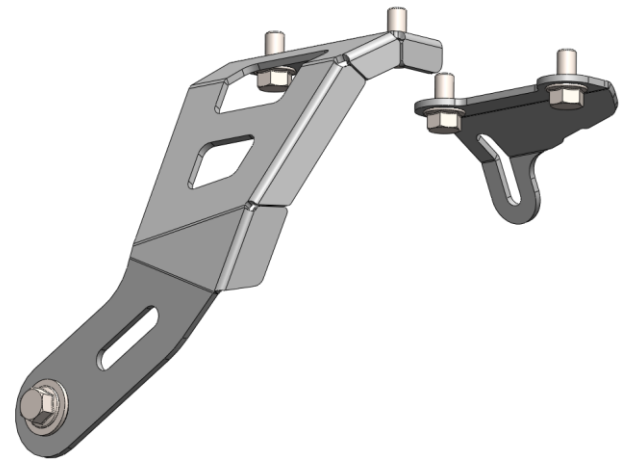

**RACKLESS HOOD
and
EXHAUST BRACKET**
REF.: 2AD222C106




ASSEMBLY INSTRUCTION

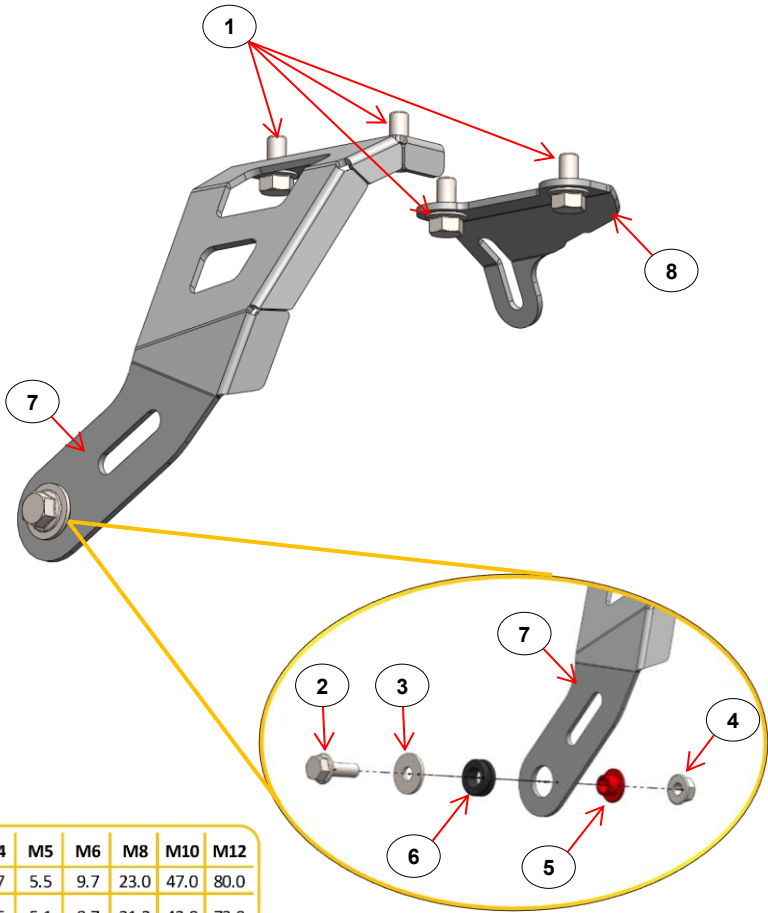


N.m	M4	M5	M6	M8	M10	M12
STEEL	8.8	2.7	5.5	9.7	23.0	47.0
STAINLESS STEEL	A2	2.6	5.1	8.7	21.2	42.0

8	Fixação / Fixation	L106	1
7	Suporte Escape / Exhaust Support	R106	1
6	Olhal de Borracha / Rubber Grommet	HOB0010006 - Ø22xØ12x8 CXØ19x2	1
5	Casquilho Aço / Steel Bushing	Ø20xØ8,5x9mm RPØ12X7,3mm	1
4	Porca Freiada FA / Hexagon Flange Lock Nuts	M8 DIN6926 - A2	1
3	Anilha Aba Larga / Large Washer	M8 DIN9021 - A2	1
2	Parafuso / Screw	M8x25 DIN6921 - A2	1
1	Parafuso / Screw	M8x16 DIN6921 - A2	4
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

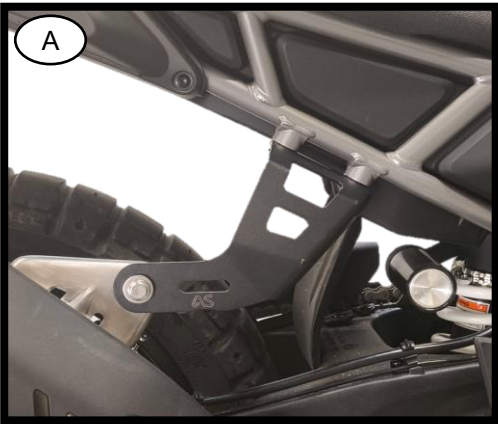

English:
• Apply item N°7 (Exhaust Support – x1) according to the photo – see assembly instruction.
Torque all screws to the correct value.

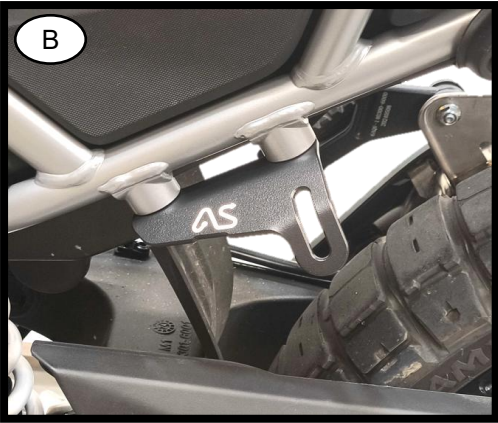

English:
• Apply item N°8 (Fixation – x1) with item N°1 (Screw – x2) and torque all screws to the correct value.